

## LEFTY 140 MAX RESETTING PROCEDURE

### Resetting Migrated Needle Bearings

1. Place the bike in a work stand.  
Release all the air pressure through the Schrader valve.
2. Remove the rebound knob and lockout lever. Remove the outer cap with the Shimano bottom bracket tool TL-FC32.
3. Compress the telescope and remove the two split rings from the top cap..
4. Fully extend the fork, and measure from top edge of outer tube to bottom edge of spindle. See right. If the length is out of specification do the following:

Firmly extend the telescope until it stops (tip - listen for the knocking at full extension to change from a hollow sound to a solid sound - this indicates full extension has been achieved). Do this several times using only moderate force, extend the lower fork leg using a pumping action.

After, you have performed this action several times, re-measure.

### CAUTION

If fork is out range following reset attempt, it may be damaged internally. The fork should be disassembled and inspected by a professional mechanic before it is ridden.

