

## Manual Reset

### NOTICE:

Do not disassemble or open for the following procedure.


Perform every 50 hours.

1. With your bike on the floor.
2. Cover the brake rotor with a clean shop towel. Remove the Schrader valve cap and hold the valve to release all air pressure. It is normal for a small amount of oil to be expelled with the escaping air.

### WARNING

Contamination can result in reduced or lost braking performance.

3. Hold the valve open while fully compressing the Supermax 2.0 with the the handlebar until it bottoms out. With the air out, using moderate force, bottom out the Supermax 2.0 firmly several times.
4. Now, measure length of exposed inner tube as shown. Repeat step three until the correct measurement for your Supermax 2.0 is reached.
5. When you are finished, reset sag.

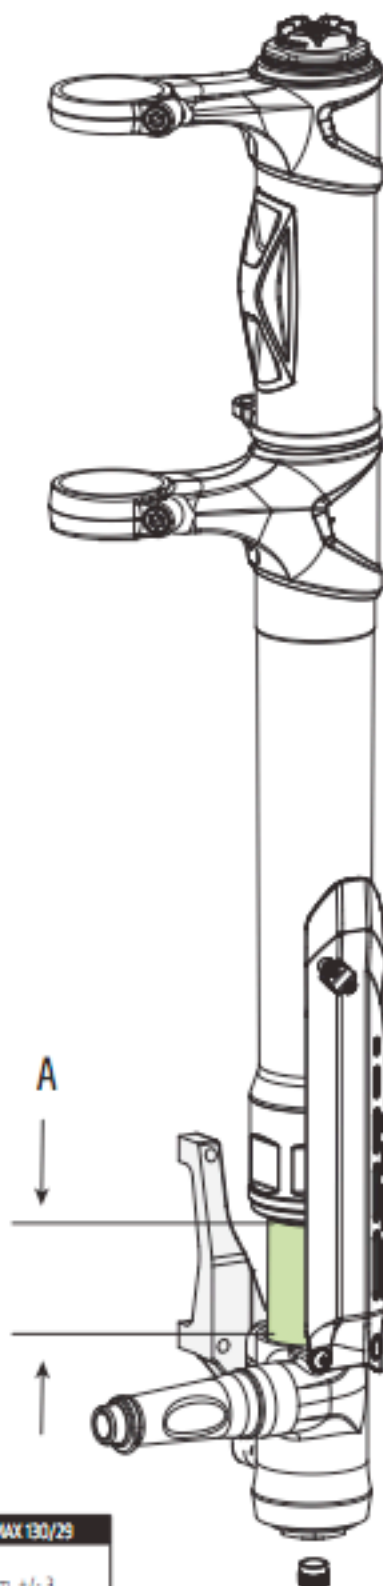

Manual Reset:	SUPERMAX 160/275	SUPERMAX 140/275	SUPERMAX 130/29
A	20mm +/- 3	20mm +/- 3	35mm +/- 3

**Measure Fully Compressed**